



Toyota Digital Key – Owners Guide



CONTENTS

Page 3 – Activating the Digital Key Service.

Page 5 – Setting up your Digital Key.

Page 10 - Managing and sharing your digital key.


Page 12 – Customising the Digital Key range (Calibration)

Page 15 – Deleting your Digital Key using the MyToyota App.

Page 16 – Deleting your Digital Key using the multimedia system.




DIGITAL KEY SERVICE ACTIVATION

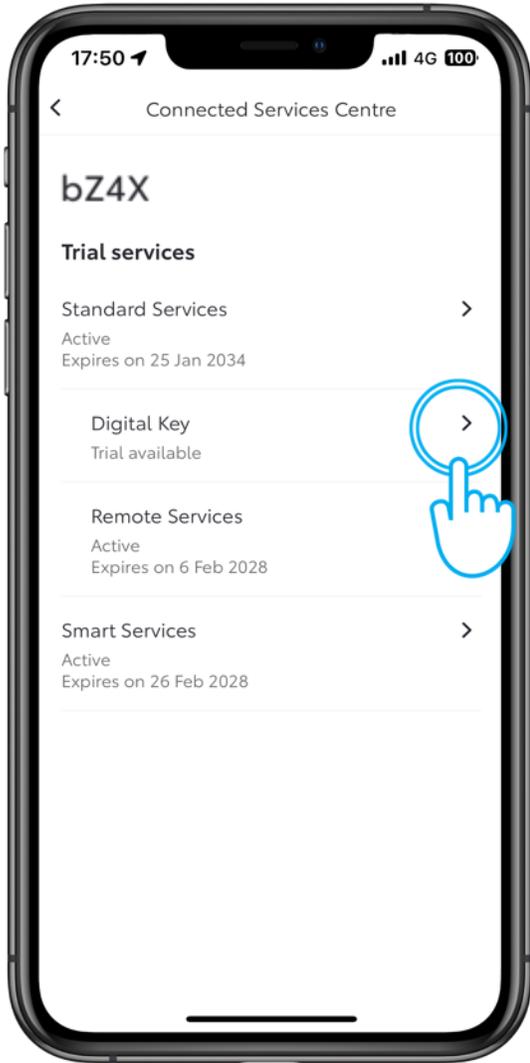

STEP 3

Tap on "Digital Key".

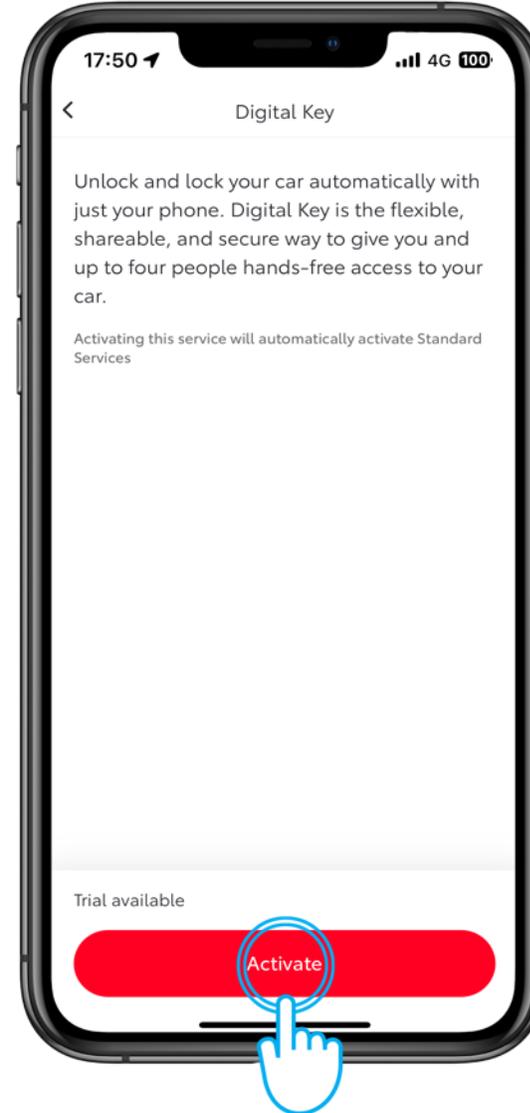


STEP 4

Tap on "Activate" to activate the Digital Key Service*.

*Activation of Digital Key service will automatically activate Standard Services




DIGITAL KEY SERVICE ACTIVATION

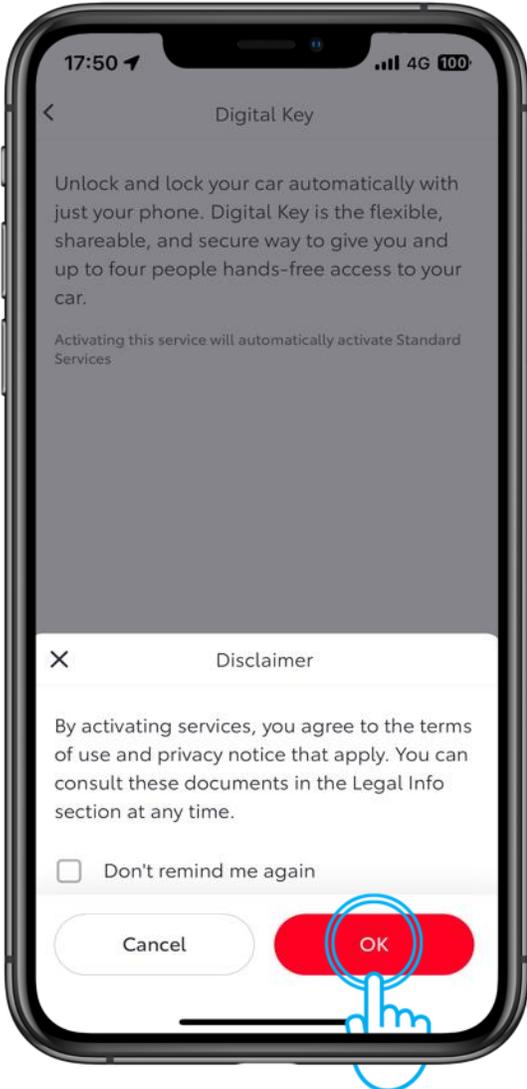

STEP 5

Tap on "OK" to confirm your activation of the Digital Key service.

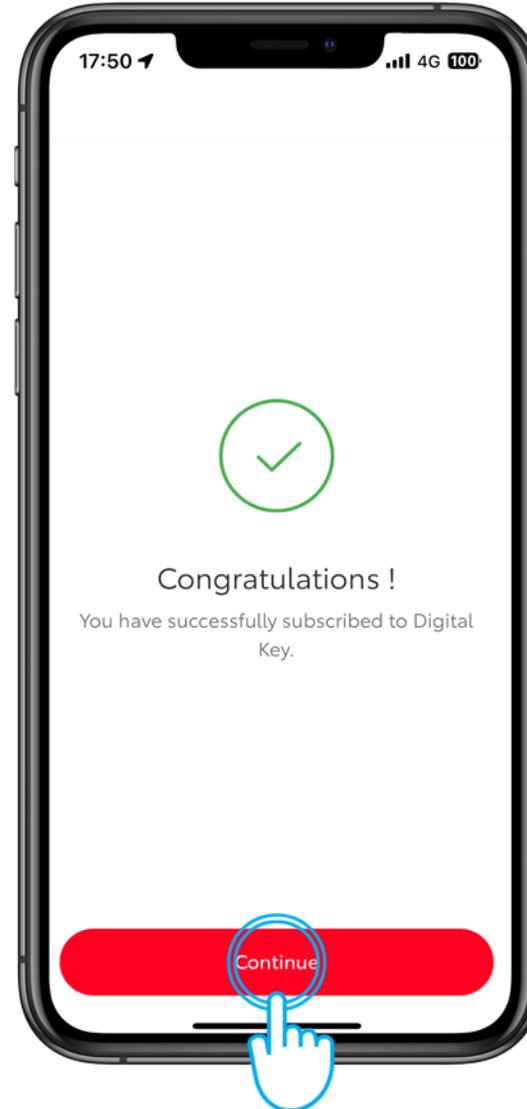


STEP 6

The activation will be confirmed.

Tap on "Continue" to set up the Digital Key.




SETTING UP YOUR DIGITAL KEY

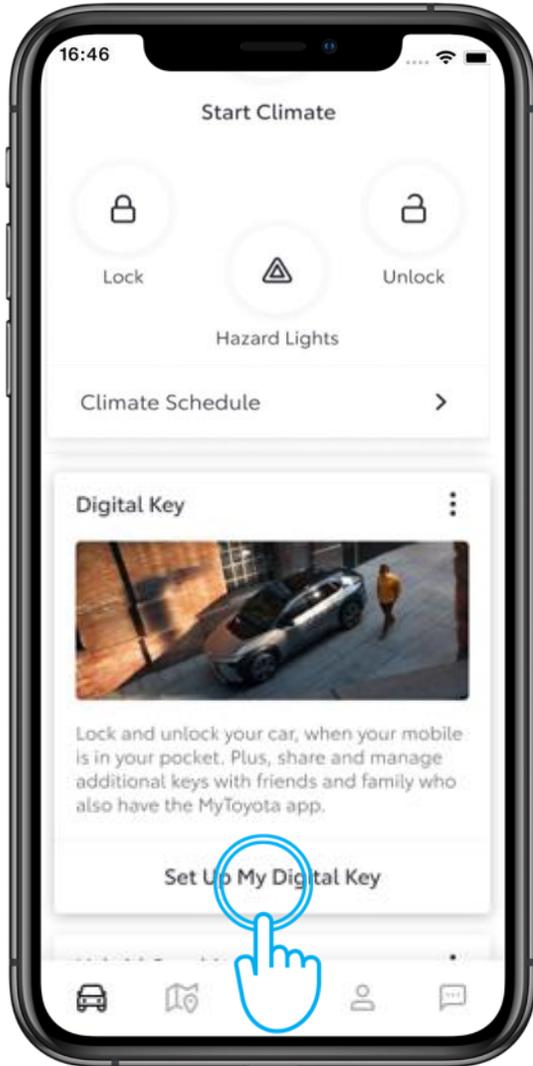

STEP 1

From the MyToyota app home screen, tap "Set Up My Digital Key".

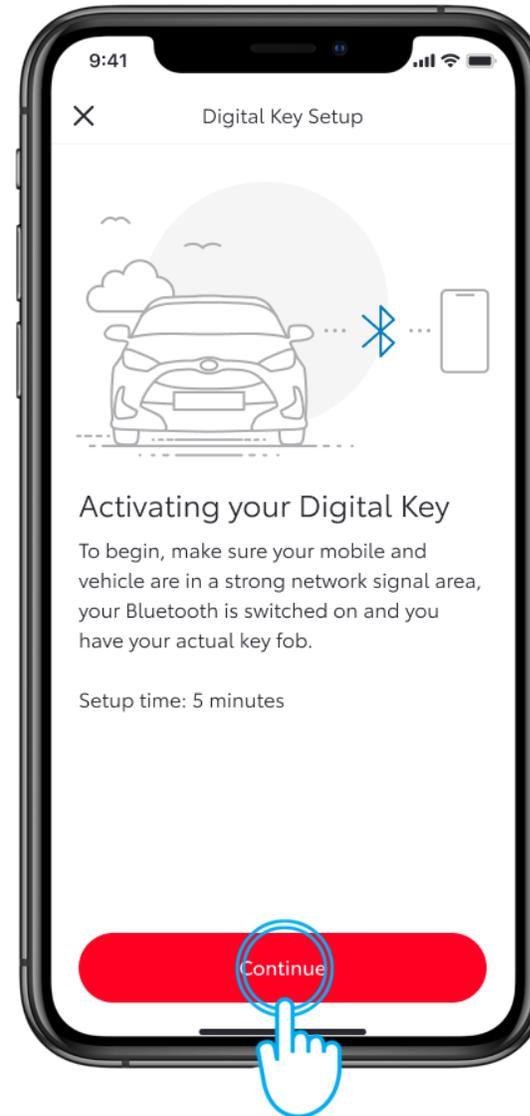


STEP 2

The setup process will begin.

Tap "Continue".




SETTING UP YOUR DIGITAL KEY

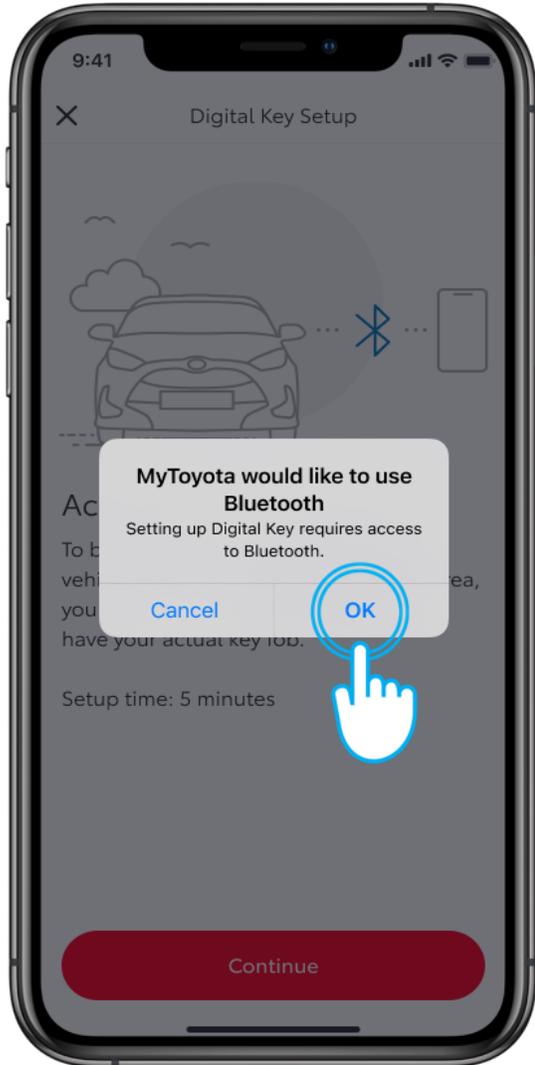

STEP 3

Bluetooth access is required to setup Digital Key.

Tap Ok.

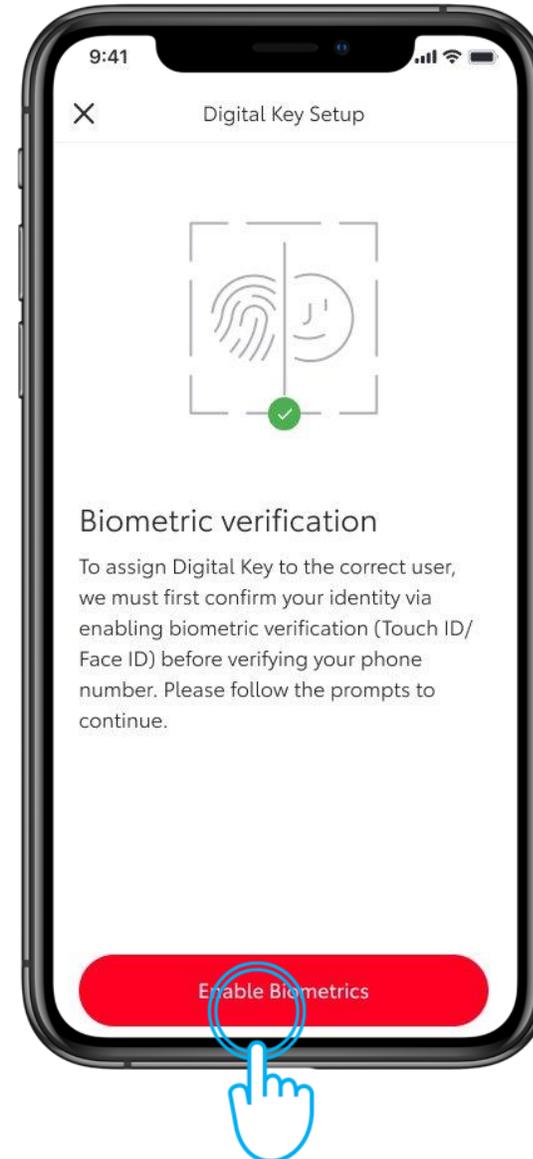


STEP 4

The app uses biometric verification to confirm your identity.

Tap "Enable Biometrics".




SETTING UP YOUR DIGITAL KEY

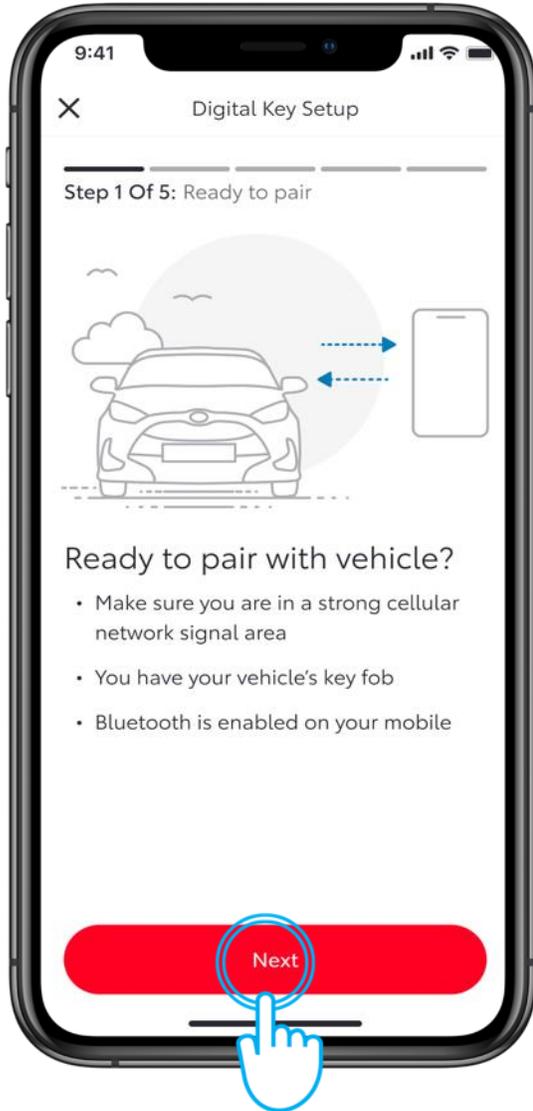

STEP 7

When pairing to your phone, make sure Bluetooth is enabled, you are in a strong cellular network area, and you have your key fob with you. Tap "Next".

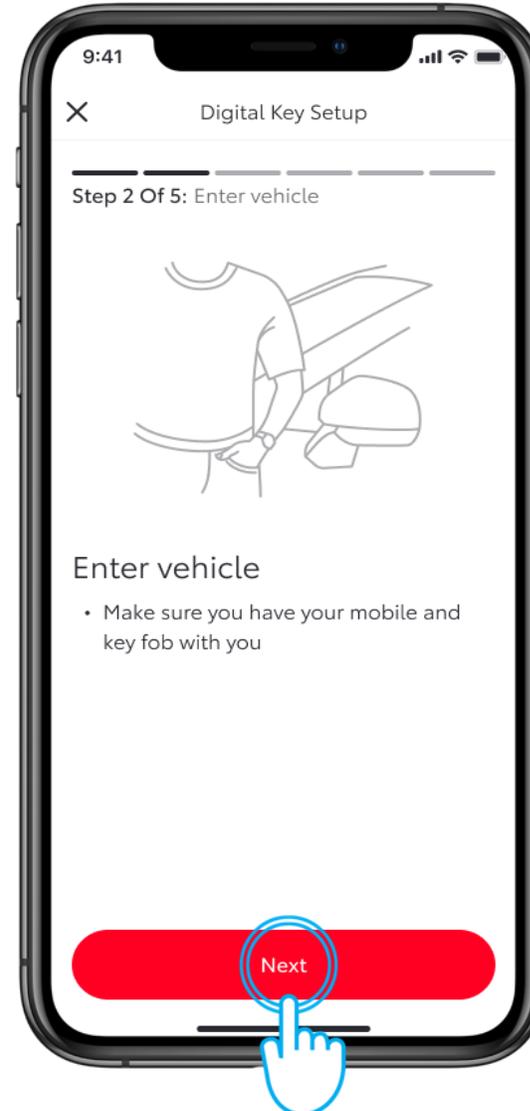

STEP 8

Enter your vehicle making sure you have your key fob with you.

Tap "Next".




SETTING UP YOUR DIGITAL KEY



STEP 9

Turn on your vehicle. Follow the onscreen instructions.

Tap "Connect To Vehicle".

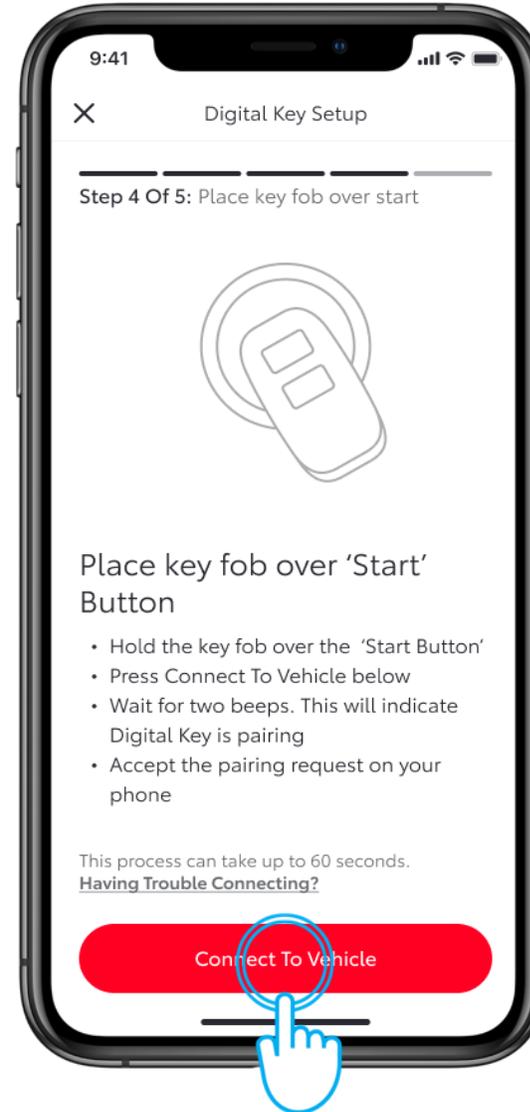


STEP 10

Place the physical key over the Start button and wait to hear two beeps.




SETTING UP YOUR DIGITAL KEY

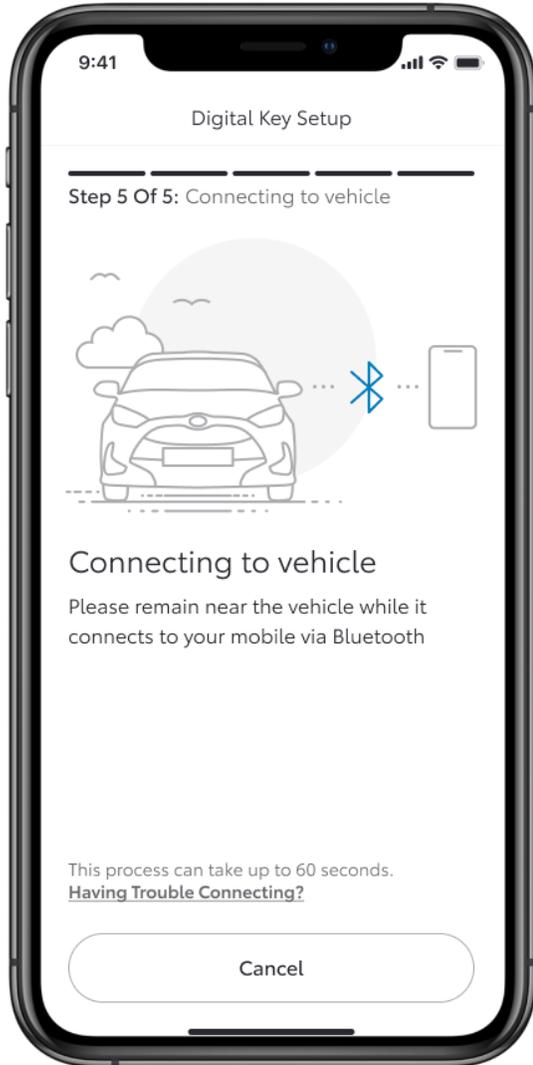

STEP 11

Bluetooth will now begin pairing with your device and the vehicle.

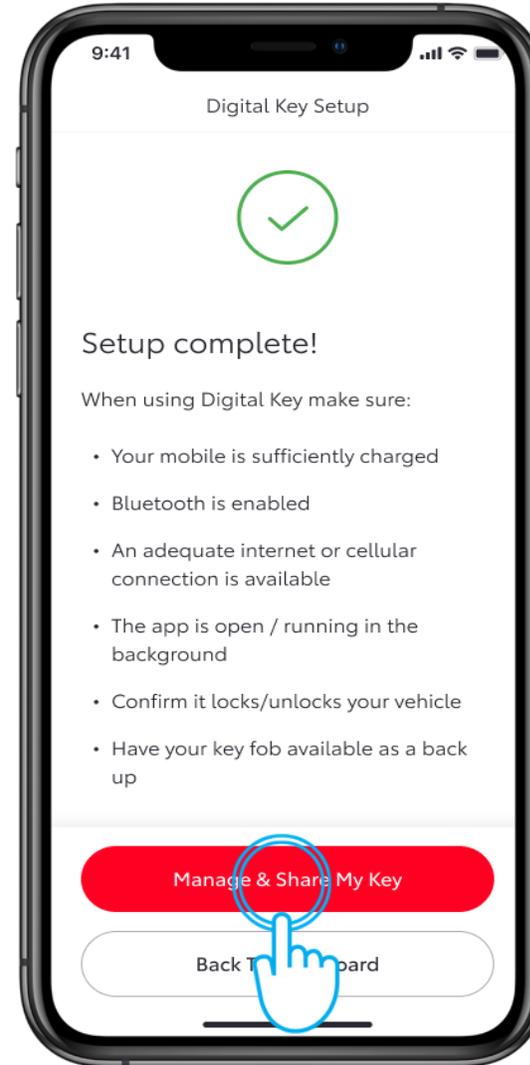

STEP 12

The app will confirm when the set up has finished.


You can now manage and share your Digital Key.

Tap "Manage & Share My Key".

Please note, Bluetooth pairing for Digital Key is different to establishing a Bluetooth connection to the vehicle's multimedia screen.




MANAGING AND SHARING YOUR DIGITAL KEY

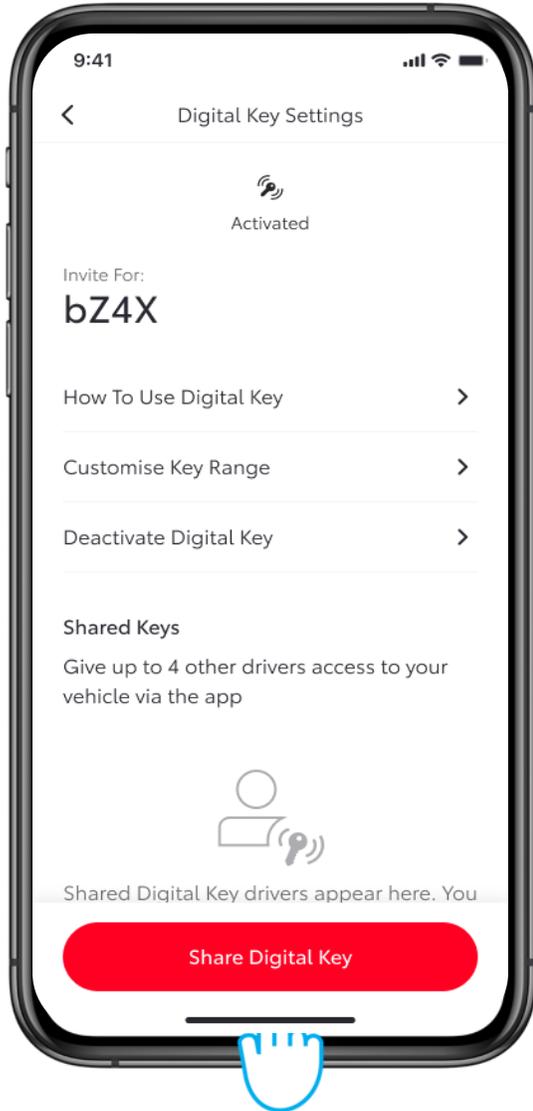

STEP 1

Tap on "Share Digital Key".

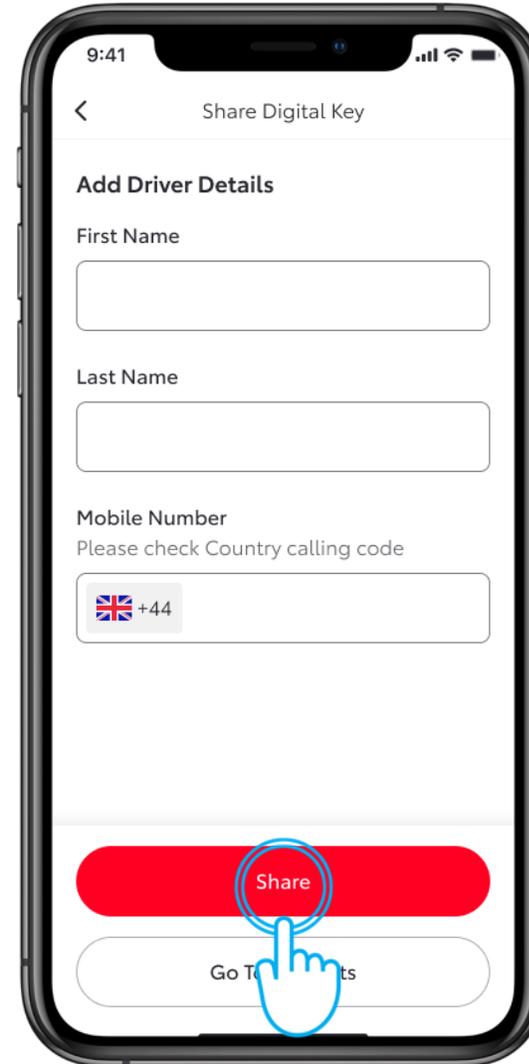


STEP 2

Add a person's details from your contacts or manually enter their information.

Tap "Share".




MANAGING AND SHARING YOUR DIGITAL KEY

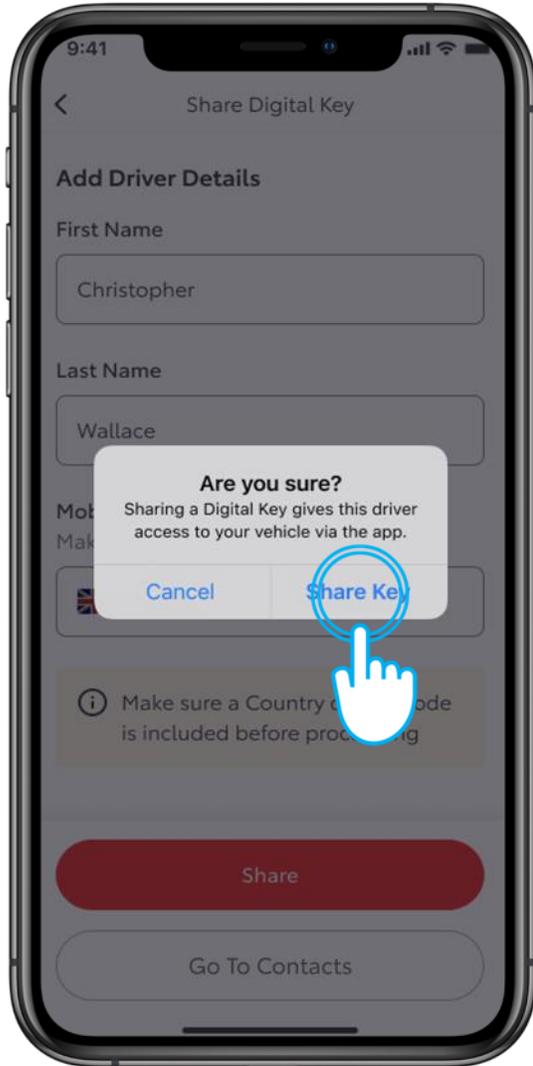

STEP 3

To confirm that you wish to give access to your vehicle tap on "Share Key".

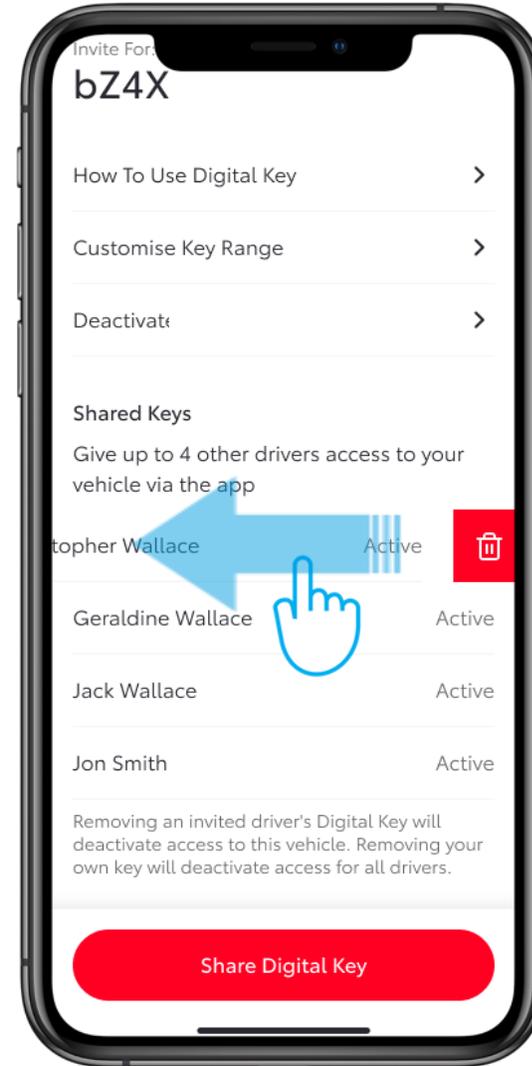


STEP 4

To deactivate a shared key, swipe left on the person's name.




CUSTOMISING THE DIGITAL KEY RANGE (CALIBRATION)

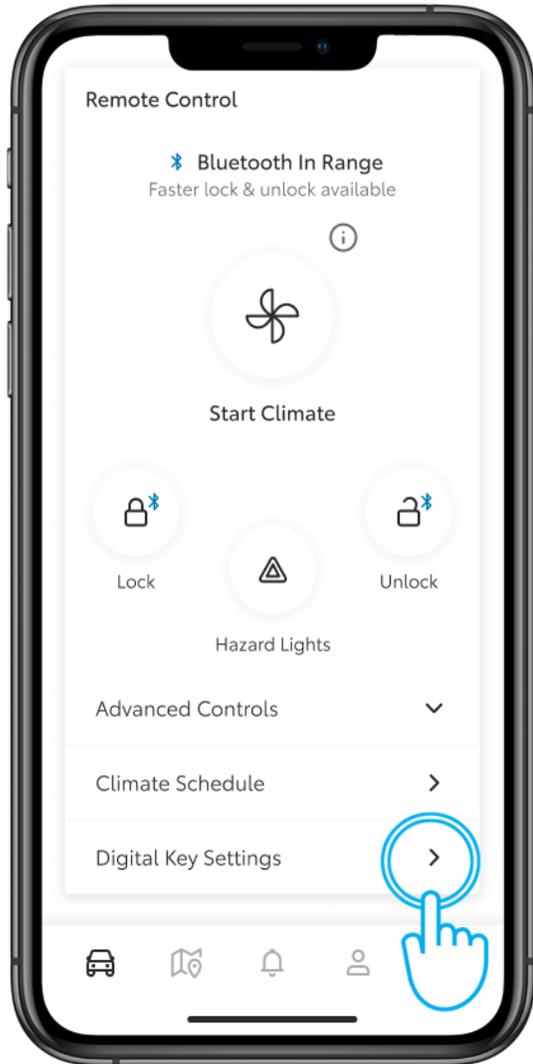

STEP 1

If you feel that the Digital Key is not detected well enough while outside or inside the vehicle, it is possible to customise the range of detection of the key.

On the main screen scroll down and tap on "Digital Key Settings".

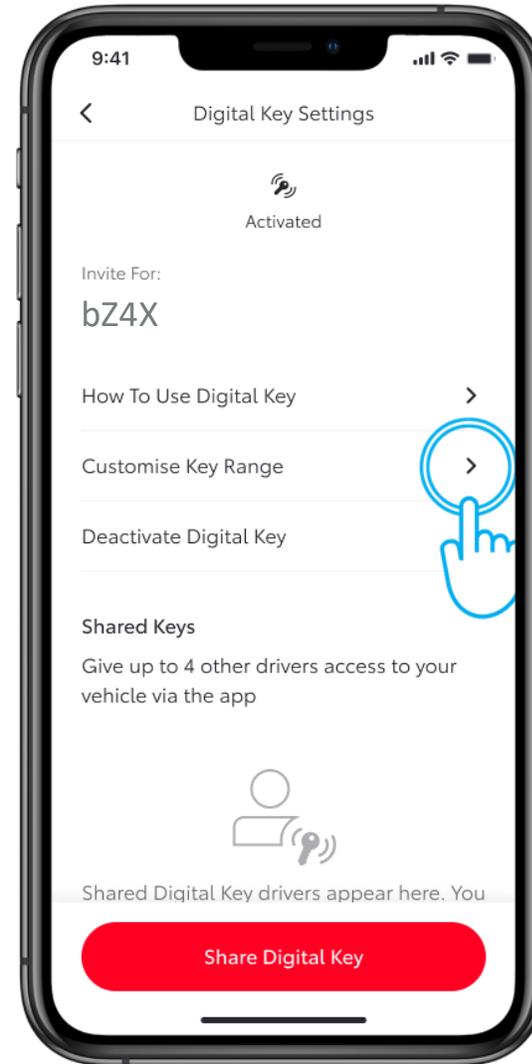


STEP 2

Tap "Customise Key Range".




CUSTOMISING THE DIGITAL KEY RANGE (CALIBRATION)

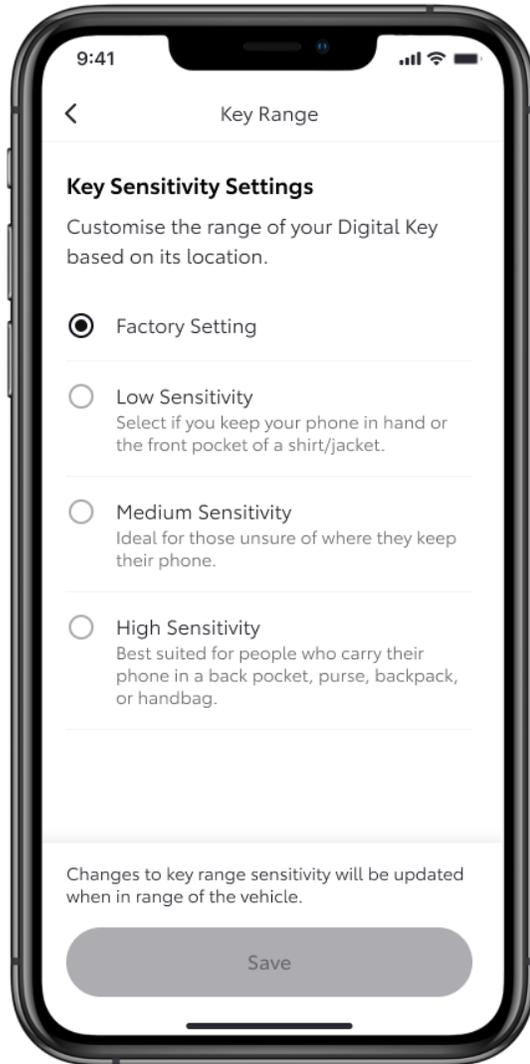

STEP 3

The Digital Key already has settings from the factory that should suit most drivers. What could impact the detection is how you carry your smartphone - Is it in a back pocket? In a purse? Or just carried in your hand?

You can choose between three different sensitivity levels depending on your personal habits.

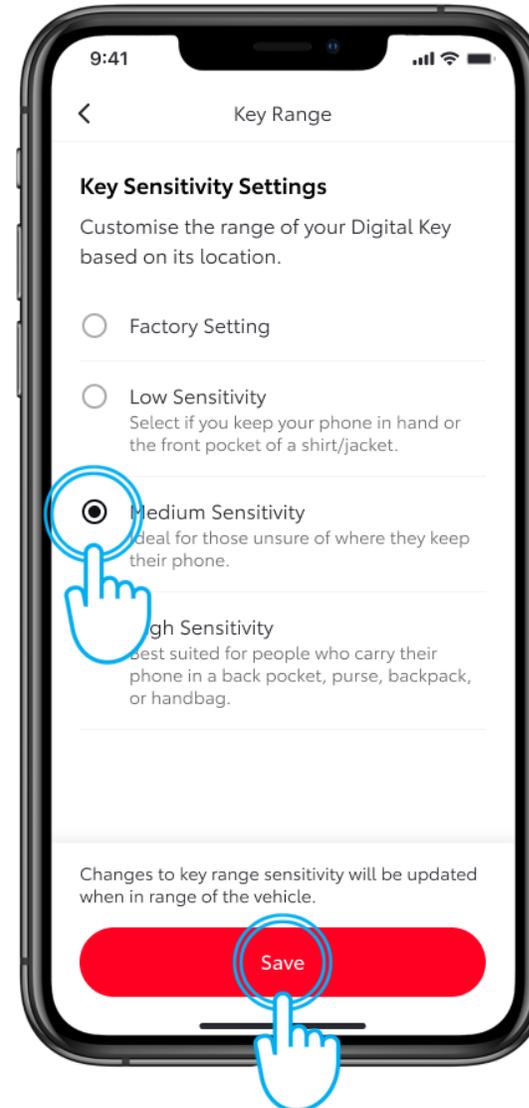


STEP 4

Select your sensitivity level and tap on "Save".



CUSTOMISING THE DIGITAL KEY RANGE (CALIBRATION)

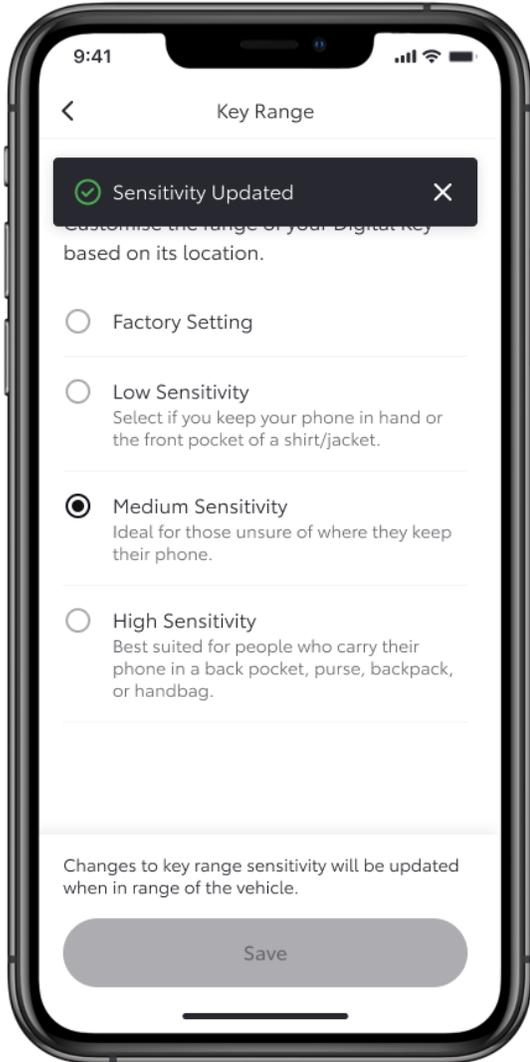


STEP 5

Confirmation of the Digital Key sensitivity update will be displayed.



REMOVING YOUR DIGITAL KEY – USING THE MyToyota APP

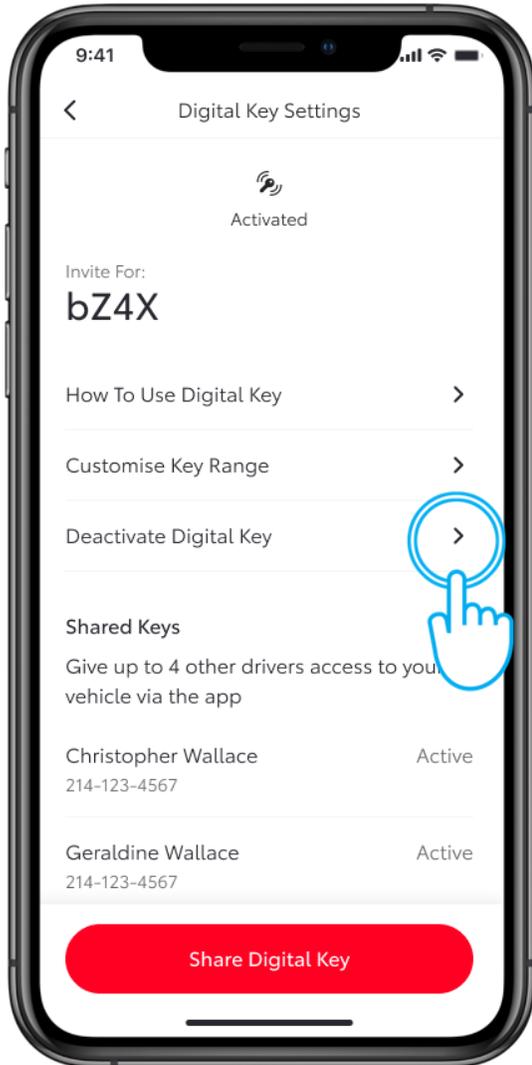


STEP 1

You can remove your Digital Key from either the MyToyota App, or from the navigation system.

This also removes ALL shared keys too.

To remove it using the MyToyota App, tap “Deactivate your Digital Key” in the Digital Key Settings.

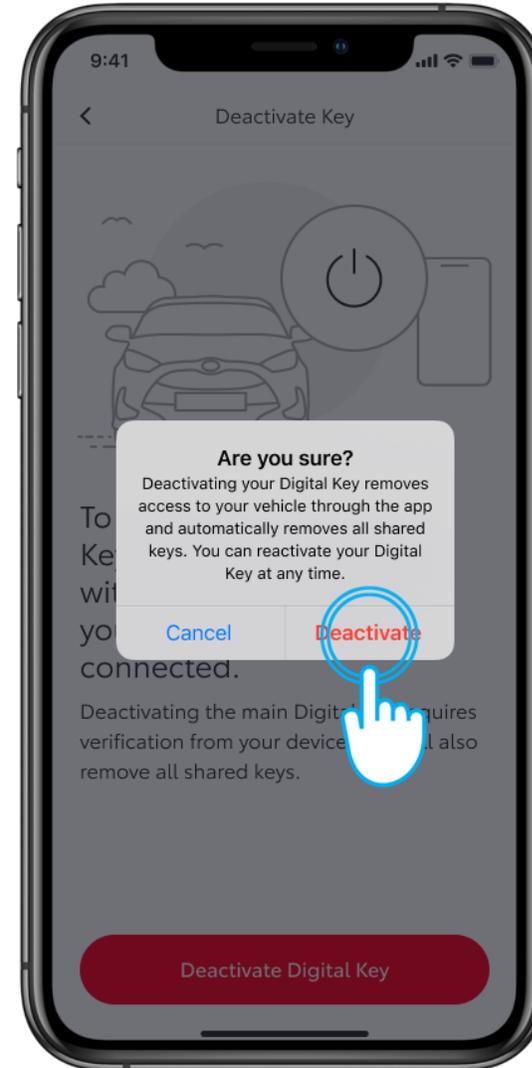

STEP 2

Tap “Deactivate” to confirm that you wish to deactivate your digital key.

Note: The engine start function of the Smart Digital Key will not operate if your vehicle is equipped with an additional immobiliser device, and if the immobiliser key is not present inside the vehicle (same as the physical key).




REMOVING YOUR DIGITAL KEY – USING THE MULTIMEDIA SYSTEM

STEP 1


On the Multimedia main dashboard, go to the setting icon, then scroll down and tap on “Info & security”.

From here, you will be able to see in the Digital Key settings, if Digital Key is active.

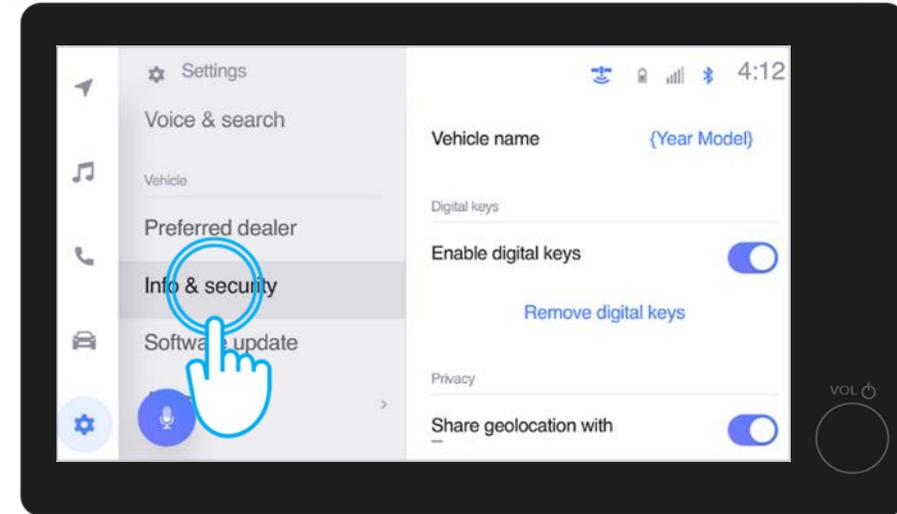

STEP 2

Tap on “Remove digital Keys”, this will initiate the removal process.

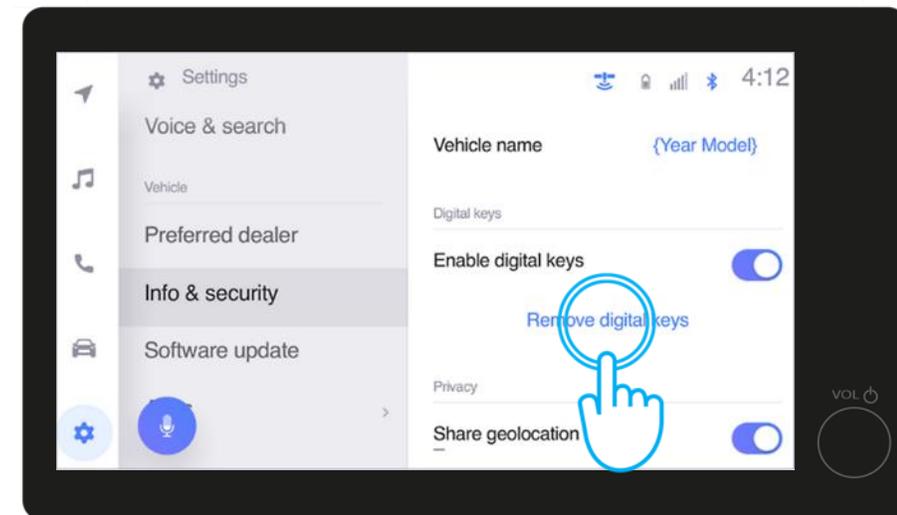


REMOVING YOUR DIGITAL KEY – USING THE MULTIMEDIA SYSTEM

STEP 3


You must confirm your intention to remove your Digital Key*.

*When owner Key is removed all shared digital keys will be removed.

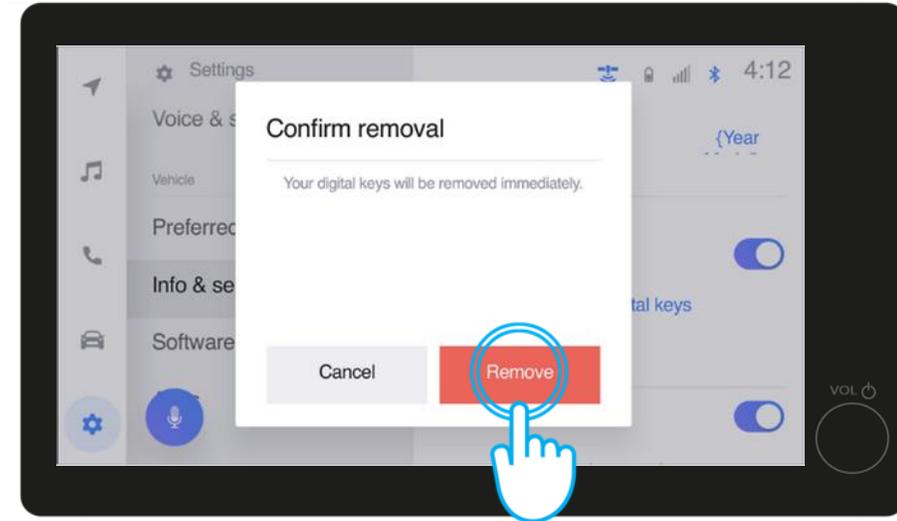

STEP 4


You will then be instructed to place the key fob on the Start button to proceed with the Digital key removal.

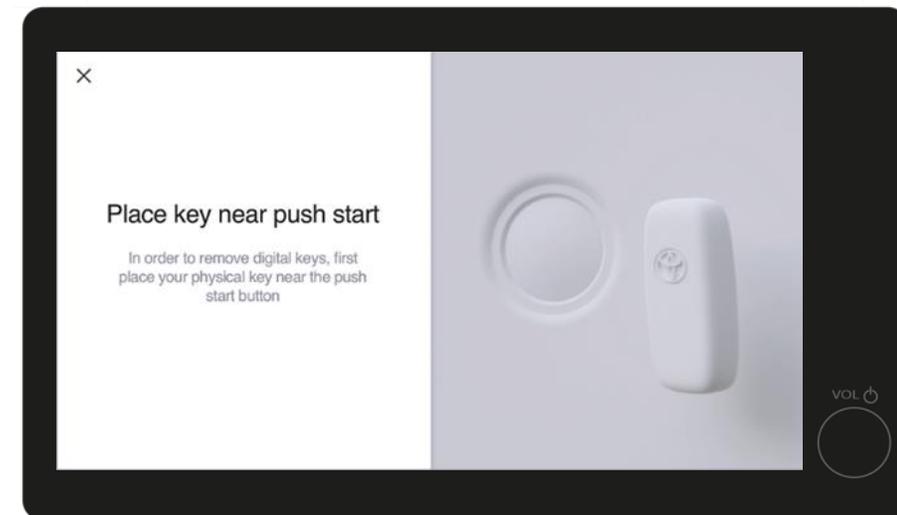

REMOVING YOUR DIGITAL KEY – USING THE MULTIMEDIA SYSTEM

STEP 5

Shortly after, you will be informed that your Digital Key has been removed.

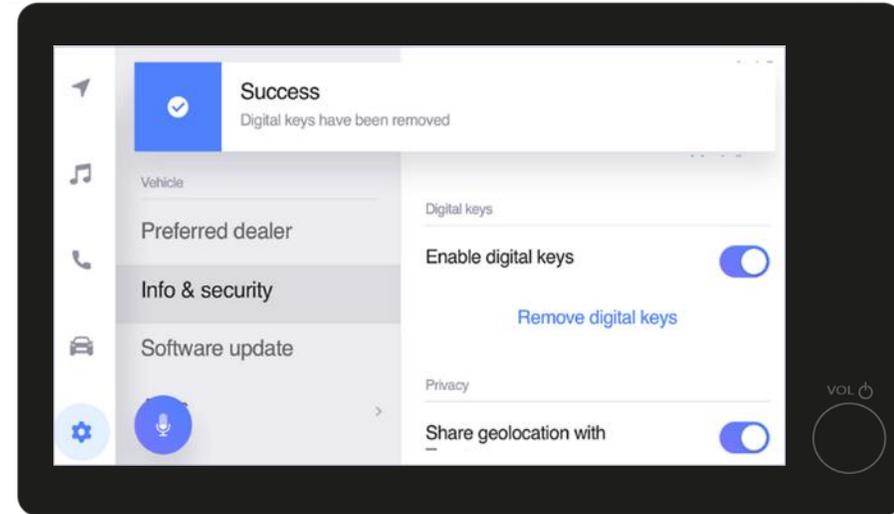

*Connected Services are continually improving, therefore visuals and app screens in this guide may slightly differ from those seen in your MyToyota App.

*Due to possible limits with the car's antenna and signal strength, we always recommend to carry the phone in your hand while using Smart Digital Key functions.

**We recommend to have your physical key available as a backup where possible



EVERY FEATURE COUNTS

*Connected Services are continually improving, therefore visuals and app screens in this guide may slightly differ from those seen in your MyToyota App.

