



Sharing Digital Key With Friends & Family - Guide



CONTENTS


Page 3 – Setting up your account.

Page 10 – Using your Digital Key.

Page 11 - Managing and sharing your Digital Key.




SETTING UP YOUR ACCOUNT

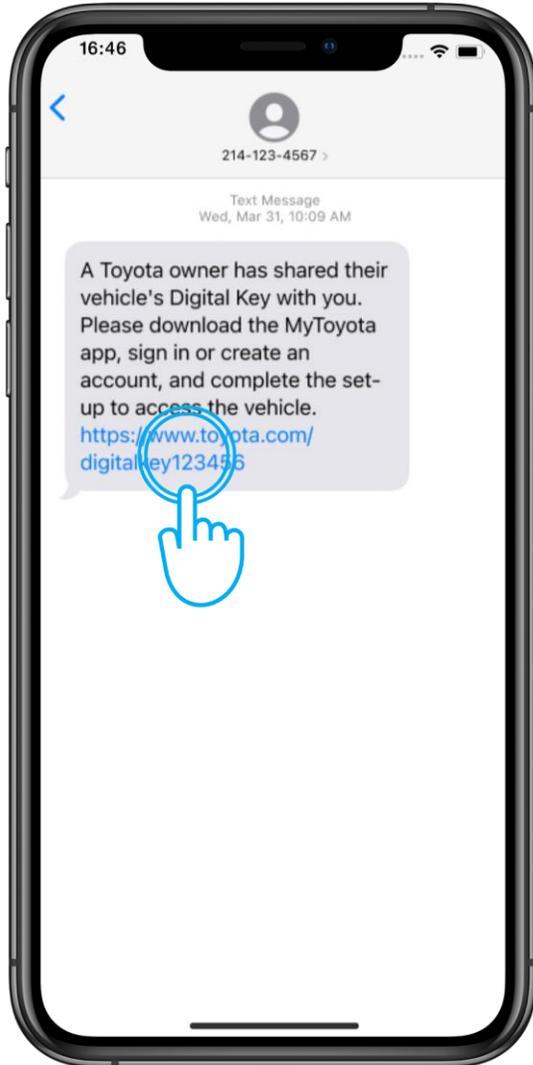

STEP 1

Having been invited to share a Digital Key, you will receive a text message.

If you haven't installed the MyToyota App yet, click the link to download it.

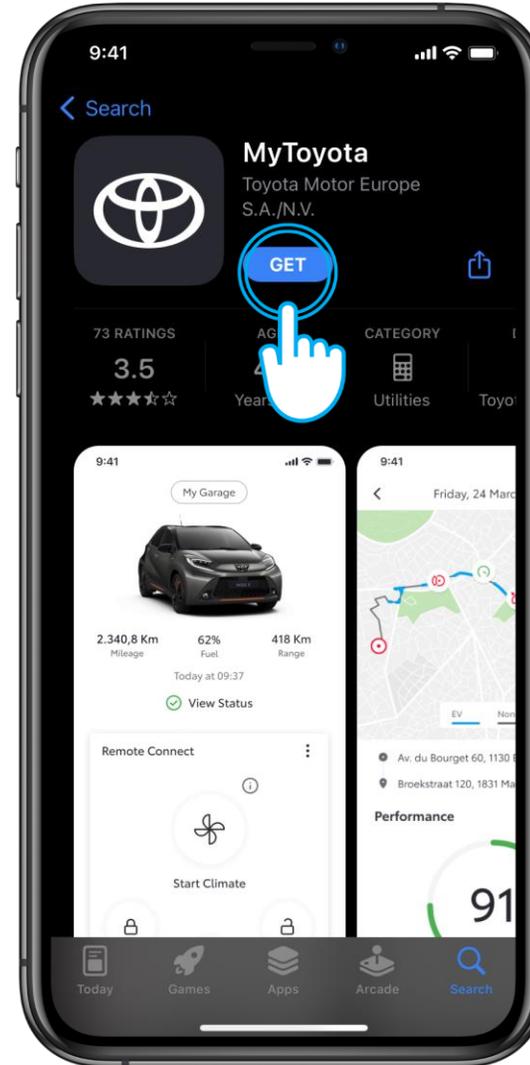


STEP 2

Download the app.



SETTING UP YOUR DIGITAL KEY

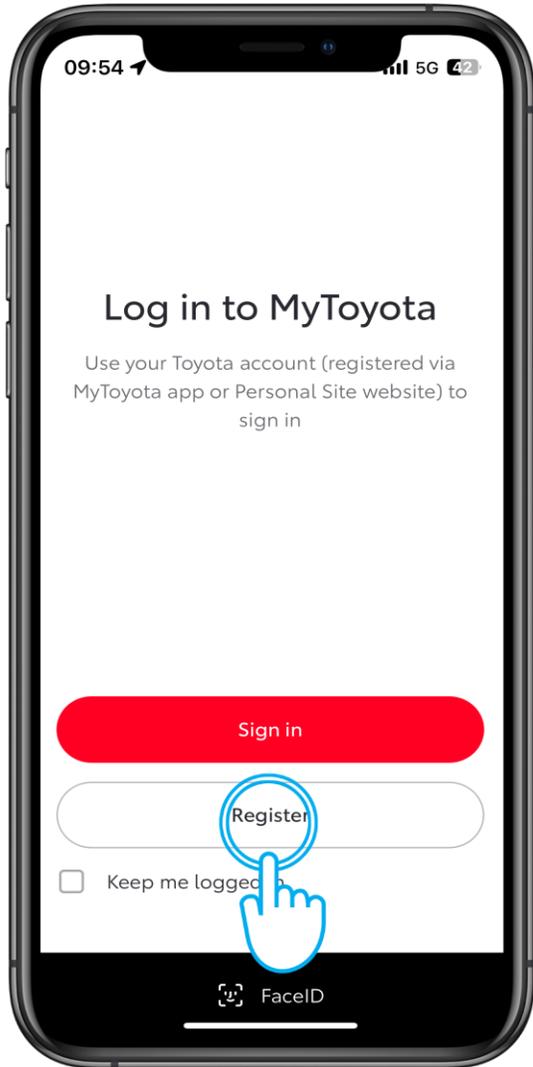

STEP 1

Register your MyToyota app account.




STEP 2

Tap "Start Setup".




SETTING UP YOUR DIGITAL KEY

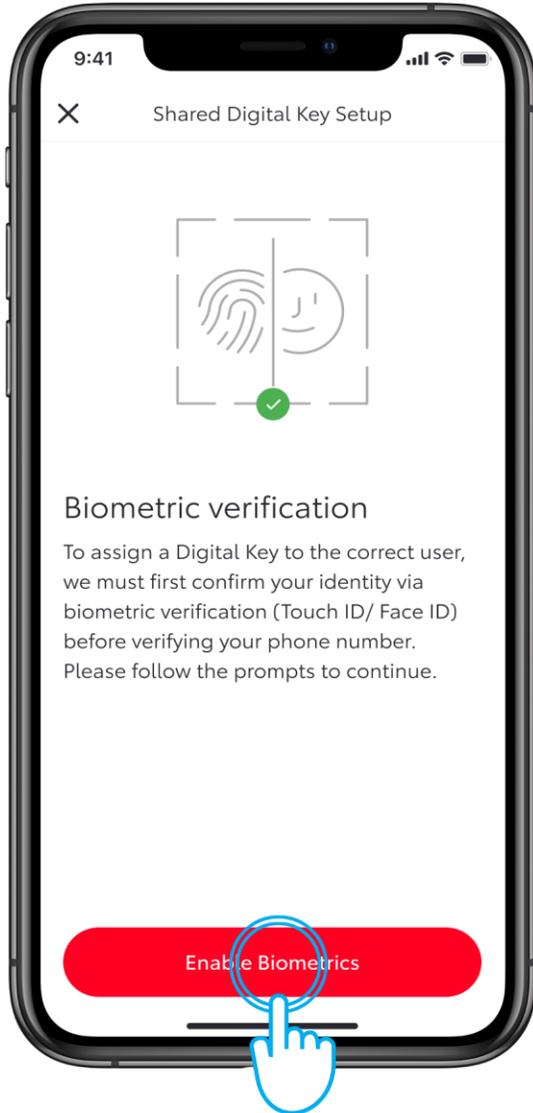

STEP 3

Follow the setup screens to verify your phone number, then accept the invitation .

Ensure that you have a reliable WiFi or data connection and enable Bluetooth and Biometrics.

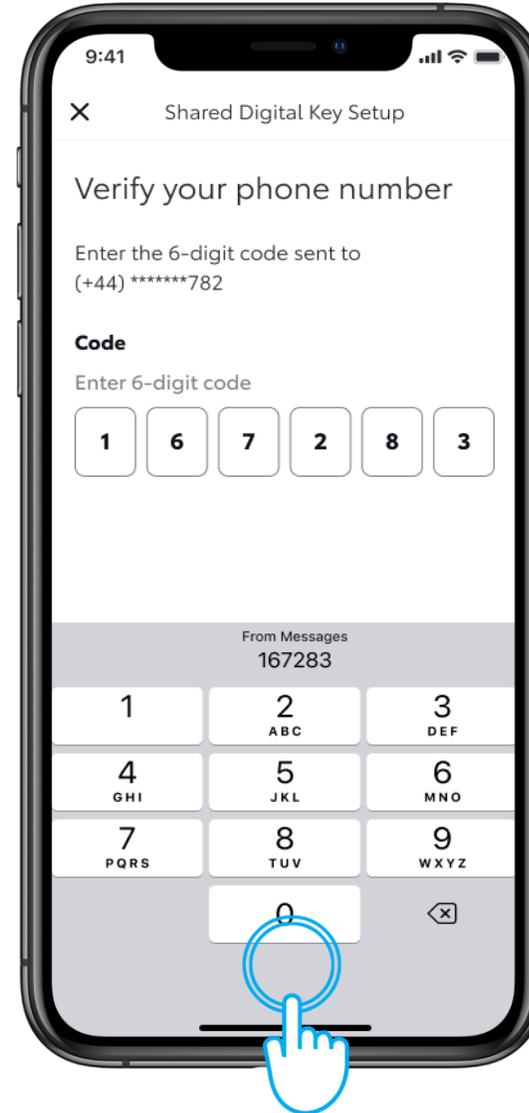


STEP 4

Verify your phone number.




SETTING UP YOUR DIGITAL KEY

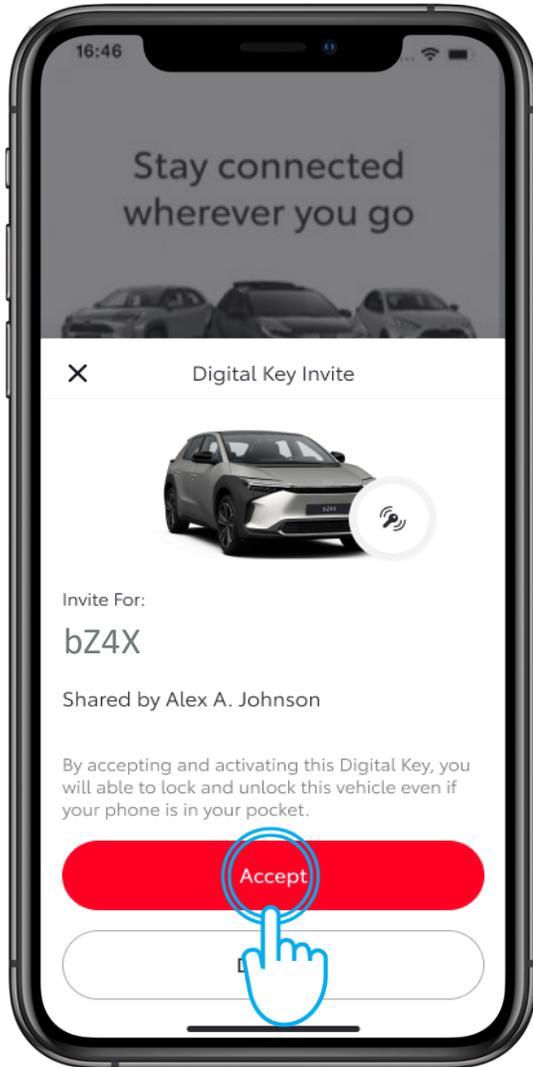

STEP 5

To proceed in downloading a shared Digital Key, tap "Accept".

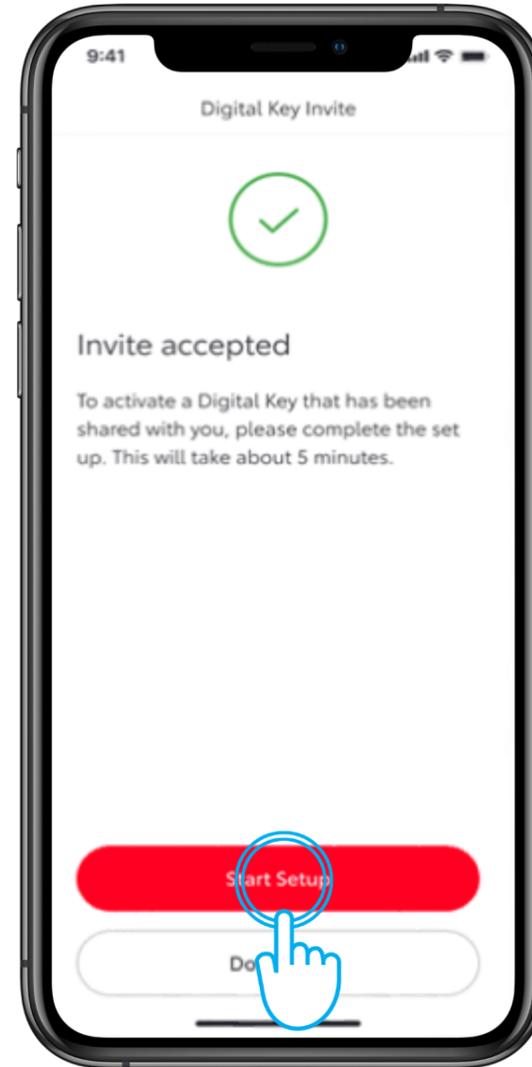


STEP 6

To activate Digital Key, tap "Start Setup".




SETTING UP YOUR DIGITAL KEY

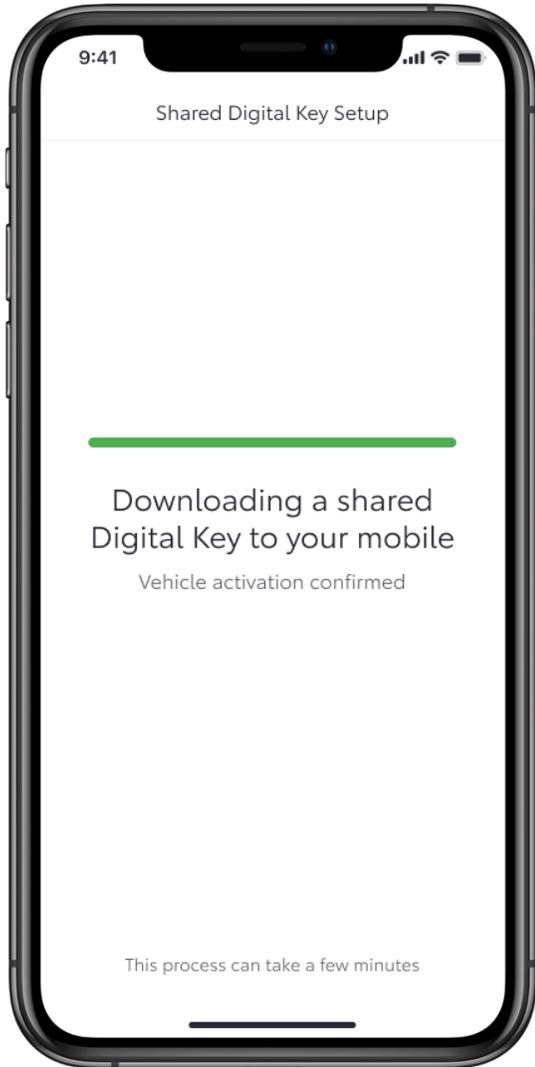

STEP 7

The Digital Key downloads automatically.

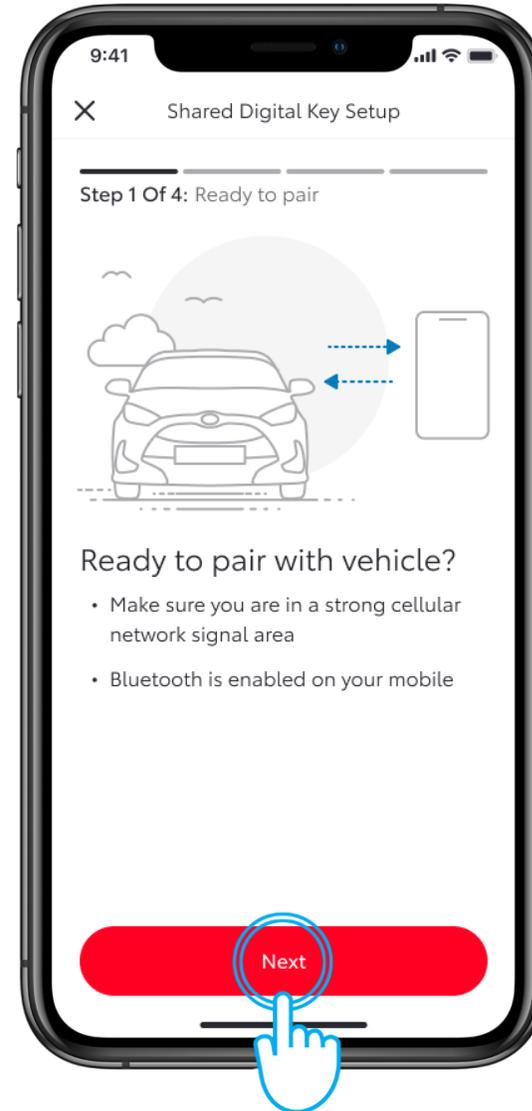

STEP 8

To pair the phone with your vehicle, follow the screens.

Click "Next".




SETTING UP YOUR DIGITAL KEY



STEP 9

Stay close to the vehicle and click "Next".

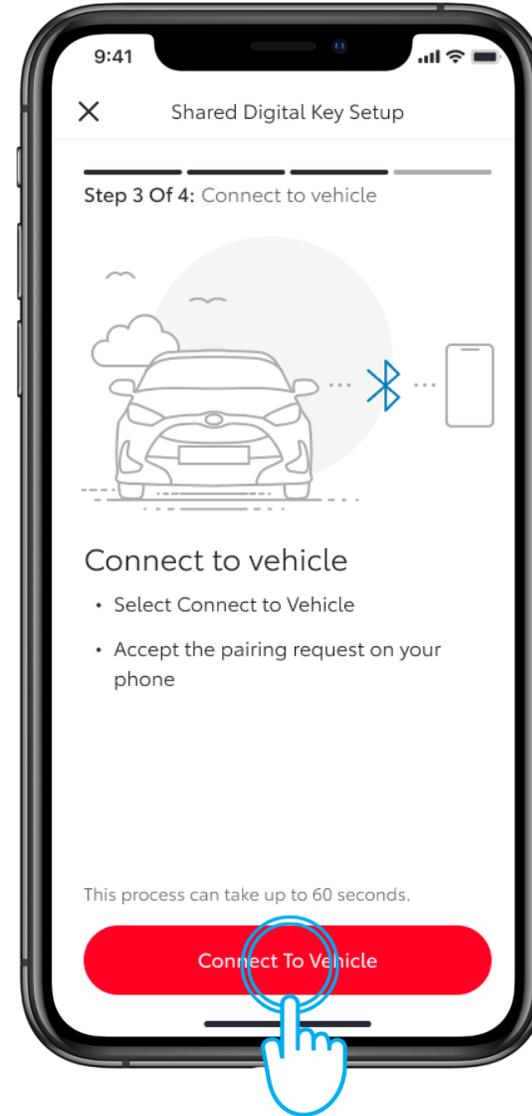


STEP 10

Tap "Connect to Vehicle".



SETTING UP YOUR DIGITAL KEY

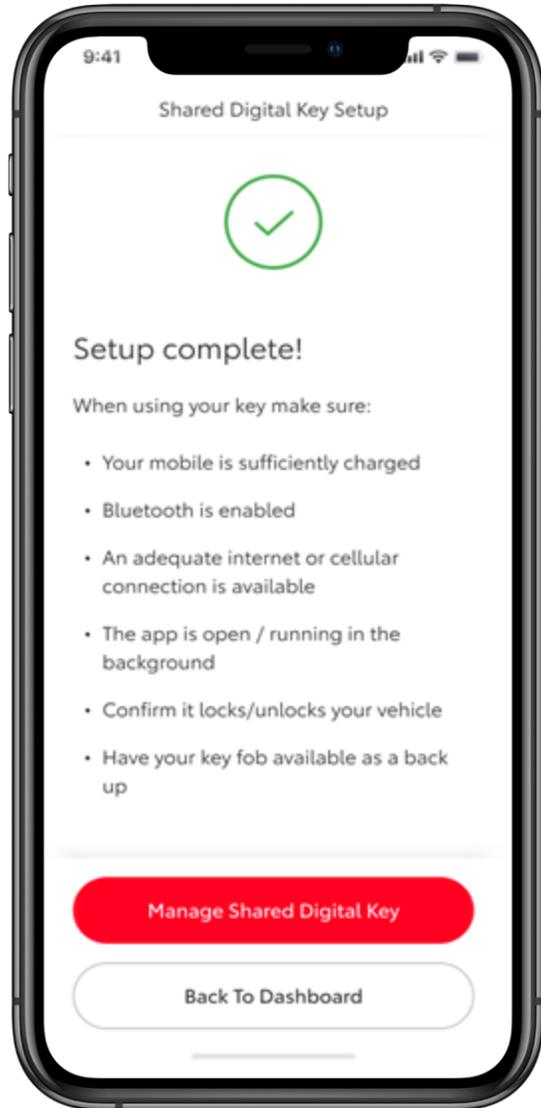


STEP 11

Set-up is now complete.




USING YOUR DIGITAL KEY

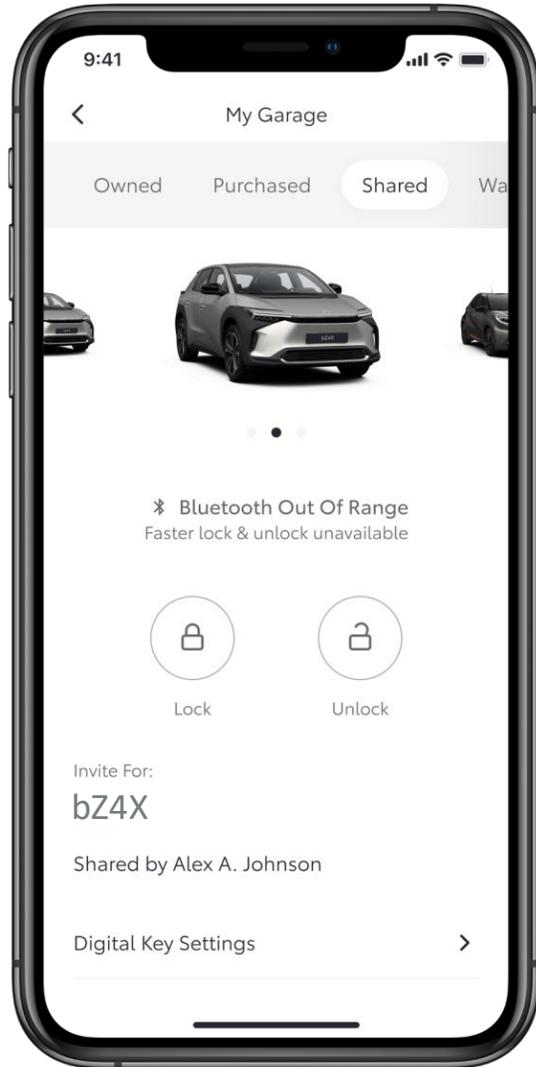

STEP 1

While using the app, the Bluetooth logo will indicate when the Digital Key is in range.

Here the screen shows the Digital key is out of range.

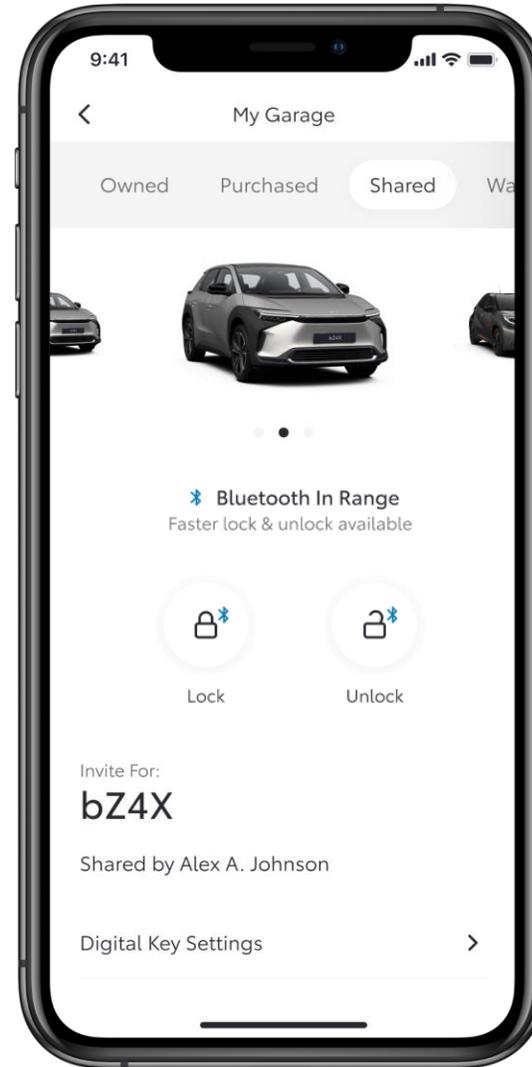


STEP 2

And here the Digital key is in range.

*Because of some limits with the car's antenna and signal strength, some functionalities might not always work as expected. This can include unlocking, locking, and starting the car, especially if there are obstacles blocking the way




MANAGING YOUR DIGITAL KEY

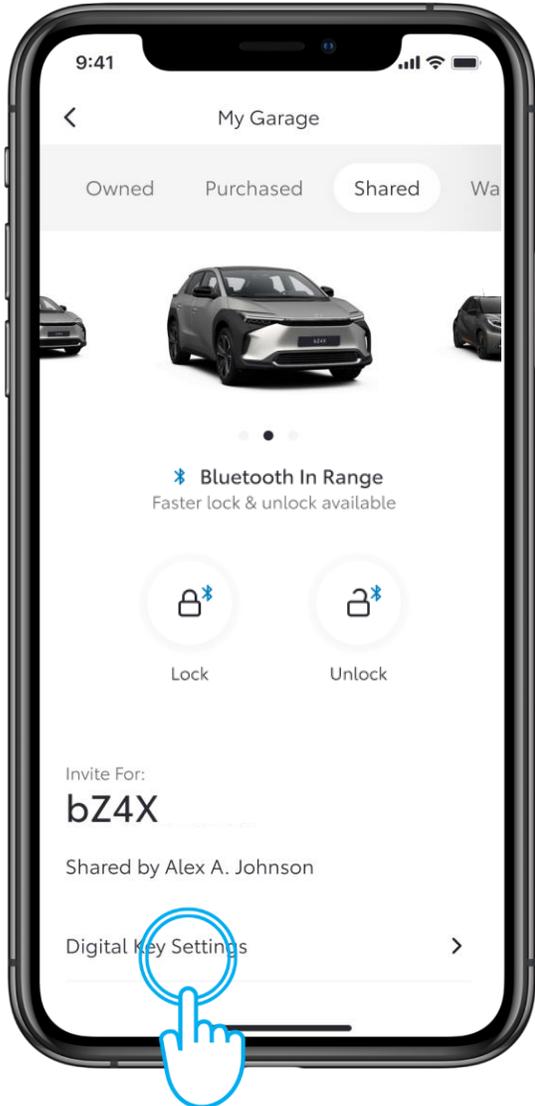

STEP 1

To manage or remove your shared Digital Key, simply go to the Digital Key Settings screen.

Tap on "Digital Key Settings".

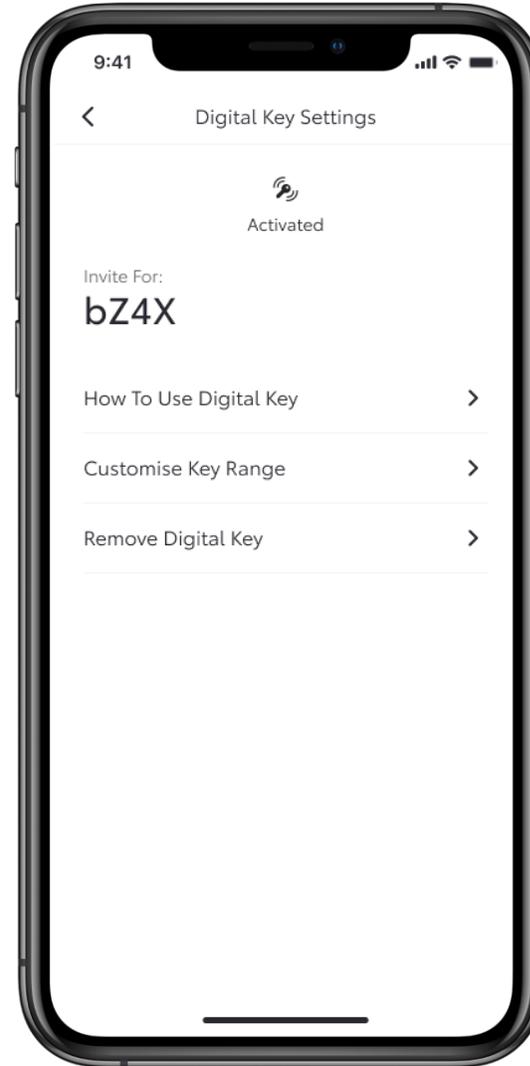

STEP 2

In this section, more information is available on how to use or remove the Digital Key.

Note: The engine start function of the Smart Digital Key will not operate if your vehicle is equipped with an additional immobiliser device, and if the immobiliser key is not present inside the vehicle (same as the physical key).

*Connected Services are continually improving, therefore visuals and app screens in this guide may slightly differ from those seen in your MyToyota App.

*Due to possible limits with the car's antenna and signal strength, we always recommend to carry the phone in your hand while using Smart Digital Key functions.

**We recommend to have your physical key available as a backup where possible



EVERY FEATURE COUNTS

*Connected Services are continually improving, therefore visuals and app screens in this guide may slightly differ from those seen in your MyToyota App.

*Due to possible limits with the car's antenna and signal strength, we always recommend to carry the phone in your hand while using Smart Digital Key functions.

**We recommend to have your physical key available as a backup where possible

